


88-200 Removal and installation of front bumper

Removal, installation

- 1 Unscrew screw on lateral holder left and right.



- 2 Unscrew both fastening nuts left and right on side member.

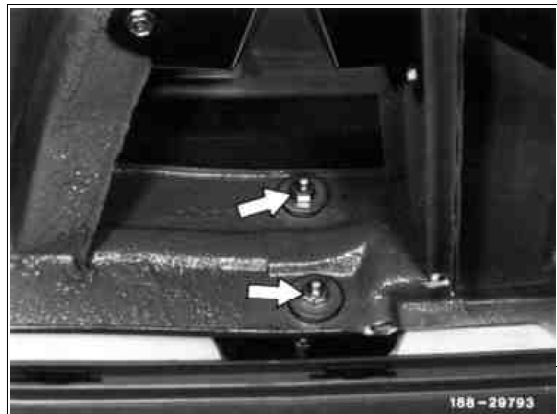

- 3 Remove screw in center of bumper and remove bumper in forward direction.

- 4 For installation proceed in reverse order.

